

Motor HONDA GX-390

Fig. 1

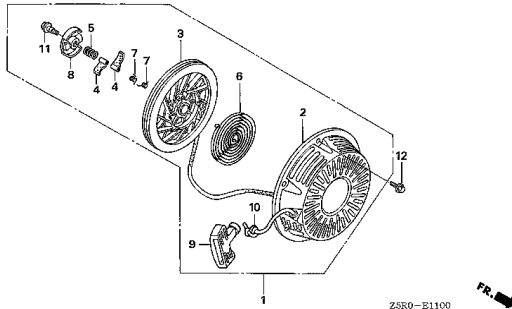


Fig. 2

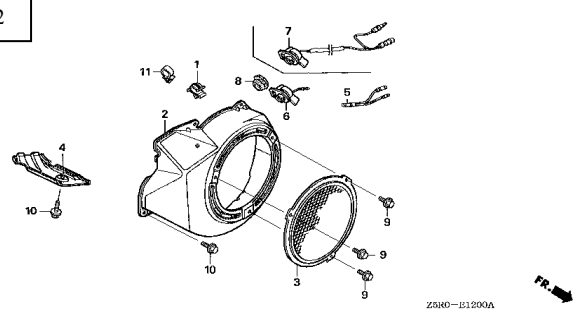


Fig. 3

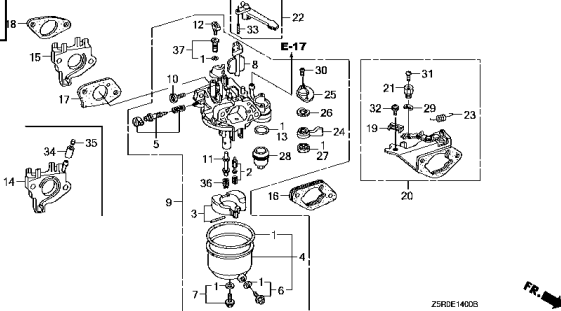


Fig. 4

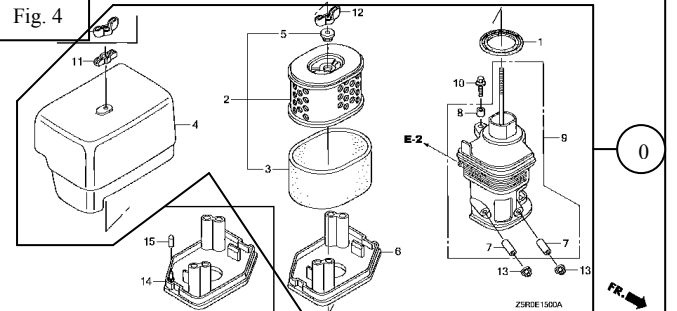


Fig. 5

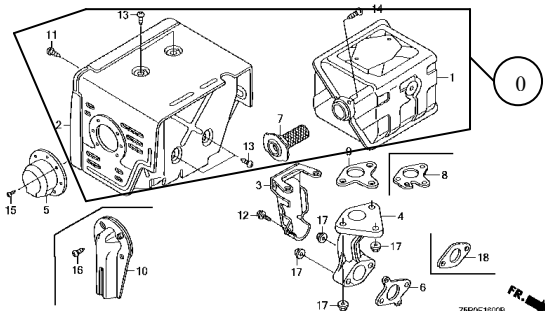


Fig. 6

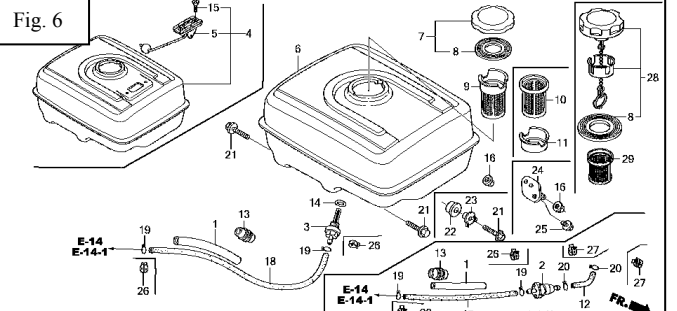


Fig. 7

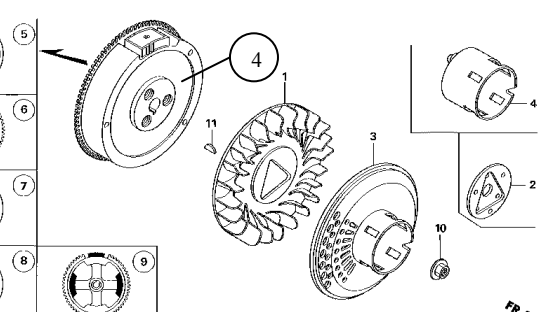


Fig. 8

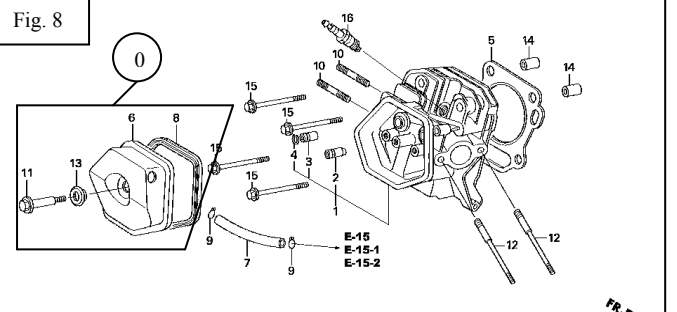


Fig. 9

This diagram shows the assembly of a cable system. Component 1 is a main cable assembly with a connector. Component 2 is a separate cable with a connector. Component 3 is a cable with a connector. Component 4 is a cable with a connector. Component 5 is a cable with a connector. Component 6 is a small rectangular component. Component 7 is a cable with a connector. Component 8 is a long cable. Component 9 is a cable with a connector. Component 10 is a cable with a connector. Component 11 is a cable with a connector. Component 12 is a cable with a connector. Component 13 is a small component. Component 14 is a cable with a connector.

[illegible][illegible][illegible][illegible]

Fig. 14

0

1 2 3 4 5 6 7

PR. A

ZICO-E0800

Fig. 15

This exploded perspective view shows the assembly of a mechanical component. The parts are numbered as follows: 1 (a small cylindrical pin), 2 (a large gear), 3 (a long shaft), 4 (two curved plates), 5 (two small cylindrical pins), 6 (two small cylindrical pins), 7 (a small spring), 8 (a long pin with a flange), 9 (a long pin with a flange), 10 (two cylindrical rollers), 11 (a small cylindrical pin), 12 (a small cylindrical pin), 13 (a small cylindrical pin), 14 (a small cylindrical pin), 15 (a central housing or bracket), 16 (two long screws), 17 (two small cylindrical pins), and 18 (a small cylindrical pin). The assembly is shown in a disassembled state, with the parts arranged to show their relative positions and how they fit together. A front view arrow (FR.) is located at the bottom right of the page.

Z1C0-B0900

Nº	Código	Descripción	Uds.	P.V.P. Unidad	Nº	Código	Descripción	Uds.	P.V.P. Unidad
<u>ARRANQUE MANUAL (Fig. 1)</u>									
*	5631300	Kit de Juntas	1		1	5631310	Arranque Completo	1	
<u>CUBIERTA VENTILADOR (Fig. 2)</u>									
2	19610-ZE3-W02ZE	Cubierta Ventilador	1		2	5630917	Interruptor ON-OFF	1	
<u>CARBURADOR (Fig. 3)</u>									
9	5631303	Carburador	1		17	5631305	Junta Carburador	1	
15	5631304	Separador Filtro	1		18	5631306	Junta Separador	1	
<u>FILTRO AIRE (Fig. 4)</u>									
0	5631307	Filtro Aire Completo	1		6	5631309	Base Filtro	1	
2	5631311	Elemento Filtro Aire	1		9	5631313	Soporte Filtro	1	
4	5631308	Tapa Filtro	1						
<u>ESCAPE (Fig. 5)</u>									
0	5630914	Cjto. Escape	1		6	5631314	Junta Codo Escape	1	
4	5631326	Codo Escape	1						
<u>DEPOSITO COMBUSTIBLE (Fig. 6)</u>									
6	5631312	Depósito-Tapón	1						
7	5630513	Tapón + Junta	1						
<u>VOLANTE (Fig. 7)</u>									
1	5631315	Ventilador	1		4	31100-ZE3-722	Plato Magnético	1	
2	28450-ZE3-W11	Vaso Arranque	1						

<u>CJTO. CULATA (Fig. 8)</u>									
0	5630922	Cjto. Tapa OHV	1		5	5631316	Junta Culata	1	
1	12200-ZF6-406	Cjto. Culata	1						
<u>BOBINA ENCENDIDO (Fig. 9)</u>									
1 8	5631317	Bobina Alta + Cable	1		2	5630926	Pipa Bijía	1	
<u>CONTROL MANDOS (Fig. 10)</u>									
1	5631318	Palanca Regulador	1		6	5631319	Mando Aceleración	1	
<u>CILINDRO (Fig. 11)</u>									
1	12000-ZF6-435	Cilindro	1		3	5631324	Regulador	1	
2	5630930	Sensor Aceite	1		4	5631321	Alerta Aceite	1	
<u>TAPA CARTER (Fig. 12)</u>									
1	11300-ZE3-604	Cjto. Tapa Carter	1		3	5630934	Tapón Aceite	1	
2	5631322	Junta Tapa Carter	1		4	5630935	Varilla Aceite	1	
<u>CIGÜEÑAL (Fig. 13)</u>									
1	13310-ZK6-671	Cigüeñal	1		6	13351-ZE3-010	Compensador	1	
<u>PISTÓN (Fig. 14)</u>									
0	5631323	Pistón + Segmentos	1		4	5631325	Cjto Biela	1	
<u>ARBOL DE LEVAS (Fig. 15)</u>									
2	14100-ZK6-870	Arbol Levas	1		9	5631301	Válvula Escape	1	
8	5631302	Válvula Admisión	1						

NOTA: En ésta lista están los recambios más habituales. Si se necesita algún otro “consultar”.