MODEL : AY 1500 MH



Lift Table Features

Feature	AY 1500 MH
AYERBE reference	580090
Equipment type	Mobile scissor lift table
Load capacity	1,500 kg
Platform dimensions	1,200 x 610 mm
Minimum platform height	380 mm
Maximum platform height	1,000 mm
Lifting stroke	620 mm
Lift	Hydraulic foot pump
Pedal strokes to maximum height	56
Lowering	Speed adjustable with hydraulic valve
Wheels	4, POLYURETHANE
Brake	Parking
Push handle	Ergonomic
Load limiter	Standard
Weight	183 kg


ISO 9001
BUREAU VERITAS Certification

AYERBE INDUSTRIAL DE MOTORES, S.A.

C/Oilamendi 8 -10 01015 VITORIA (SPAIN)
Tel. +(34) 945 292 297 FAX +(34) 945 292 298
E-mail: ayerbe@ayerbe.net www.ayerbe.net

MODEL : AY 1500 MH

Dimensions and Weight

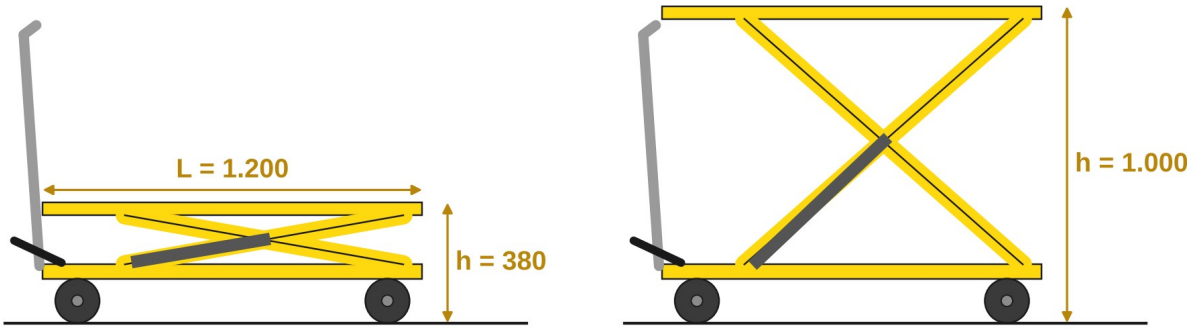

Nº	Technical data	Symbol	Value
1	Manufacturer		AYERBE
2	Model		AY 1500 MH
3	Load capacity	Q	1,500 kg
4	Service weight		183 kg
5	Platform (length x width)	L x A	1,200 x 610 mm
6	Minimum platform height	h min.	380 mm
7	Maximum platform height	h max.	1,000 mm
8	Pedal strokes to maximum height		56
9	Wheels		4, POLYURETHANE

Left: table lowered. Right: table raised. Indicative diagram, not to scale.

ISO 9001
BUREAU VERITAS Certification

AYERBE INDUSTRIAL DE MOTORES, S.A.

C/Oilamendi 8 -10 01015 VITORIA (SPAIN)
Tel. +(34) 945 292 297 FAX +(34) 945 292 298
E-mail: ayerbe@ayerbe.net www.ayerbe.net

MODEL : AY 1500 MH

Equipment Description




1	Push handle	5	Scissor
2	Lowering control	6	Platform
3	Pump pedal	7	Braked wheels
4	Hydraulic cylinders		


Details



Push handle and lowering control

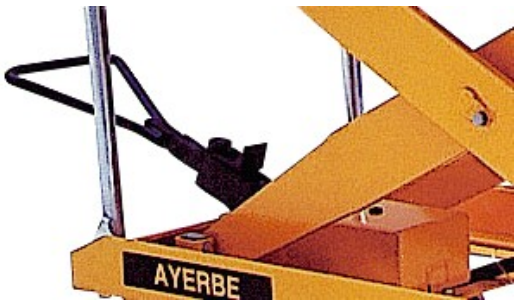

Pump pedal and hydraulic cylinder

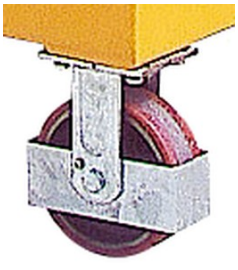

Wheel with parking brake

ISO 9001
BUREAU VERITAS Certification

AYERBE INDUSTRIAL DE MOTORES, S.A.

C/Oilamendi 8 -10 01015 VITORIA (SPAIN)
Tel. +(34) 945 292 297 FAX +(34) 945 292 298
E-mail: ayerbe@ayerbe.net www.ayerbe.net

MODEL : AY 1500 MH

Operating the table

Control	Use
Raise (pedal)	Pressing the pedal raises the platform: about 56 pedal strokes to 1,000 mm.
Lower (control on the handle)	Operating the lowering control lowers the platform; the speed is adjusted with the hydraulic valve.
Move	With the push handle and the brakes released, on a smooth floor.
Brake	Apply the parking brake before loading, unloading or working.

What it means in practice

Adjustable height from 380 to 1,000 mm

Brings the load to the height of the machine, shelving or workstation: less effort for the operator.

Foot-operated lifting

The foot pump leaves the hands free to hold the load.

Adjustable lowering

The hydraulic valve lets the load be lowered slowly and precisely.

Load limiter

Protects the table and the operator if the capacity is exceeded.

ISO 9001 BUREAU VERITAS Certification

AYERBE INDUSTRIAL DE MOTORES, S.A.

C/Oilamendi 8 -10 01015 VITORIA (SPAIN)

Tel. +(34) 945 292 297 FAX +(34) 945 292 298

E-mail: ayerbe@ayerbe.net www.ayerbe.net

MODEL : AY 1500 MH

Construction

- Sturdy steel construction, with scissor lift and 1,200 x 610 mm platform.
- Two hydraulic cylinders with chromed piston rods and load limiter.
- Hydraulic foot pump and adjustable lowering valve.
- Ergonomic push handle with lowering control.
- 4 POLYURETHANE wheels with parking brake.

Wheels and brake

	Detail
Wheels	4, POLYURETHANE
Advantage	Smooth, quiet rolling; non-marking
Brake	Parking: holds the table still when loading or working

Options and Variants to Order

Option	Description
Other capacities and heights	Consult AYERBE
Other tables	AY 150 MH, AY 300 MH, AY 500 MH, AY 750 MH and AY 1000 MH
Scissor pallet truck	AY 1000 TT, up to 800 mm and 1,000 kg

Options available depending on model: check availability and lead times with AYERBE.

Typical uses

Use	Where	Advantage
Transport	Workshop, warehouse, factory	Moves loads of up to 1,500 kg
Loading and unloading	Machines, shelving, vehicles	Adjusts the load height
Workstation	Assembly, preparation	Working at the right height

ISO 9001 BUREAU VERITAS Certification

AYERBE INDUSTRIAL DE MOTORES, S.A.

C/Oilamendi 8 -10 01015 VITORIA (SPAIN)

Tel. +(34) 945 292 297 FAX +(34) 945 292 298

E-mail: ayerbe@ayerbe.net www.ayerbe.net

Maintenance Schedule

Interval	Operation
Daily	Inspection before starting work (see list).
Monthly	Grease the scissor joints, axles and wheels; remove any dirt.
Every 6 months	Check the hydraulic oil level with the table lowered; check pins and joints.

Daily inspection

- With the table unloaded and lowered: check for deformation or cracks in the platform, scissor and frame.
- Check for oil leaks or the platform lowering by itself.
- Check that the pedal raises the table and that the lowering control works.
- Check that the wheels turn freely and that the brake holds the table.
- Check that bolts and pins are tight and that the labels are in place.

Faults and Remedies

Problem	Probable cause	Remedy
Does not rise or does not reach 1,000 mm	Low oil; air in the circuit; overload (limiter acting)	Top up the oil; bleed; reduce the load
Lowers by itself	Lowering valve dirty or out of adjustment; worn seals	Clean or adjust the valve; replace seals
Does not lower	Lowering control out of adjustment; obstacle under the platform	Adjust the control; remove the obstacle
Oil leaks	Worn or damaged seals	Replace seals or parts

Repairs to the hydraulic system must only be carried out by trained technical staff.


MODEL : AY 1500 MH

Safety Instructions

- Only trained and authorised personnel wearing safety footwear may operate it.
- Do not overload: maximum 1,500 kg, with the load centred and spread over the platform.
- Apply the brake before loading, unloading or working on the table.
- Standing on the platform or lifting people is prohibited.
- Keep hands and feet away from under the platform and between the scissor arms: risk of trapping.
- Move the table with the platform lowered and the load secured; never on slopes.
- Do not carry unstable loads or loads that overhang the platform.

Conditions of Use and Standards

- Indoor use on firm, smooth, level floors.
- CE marked.
- Applications: transport, loading and unloading, and preparation in the workshop or at the workstation.

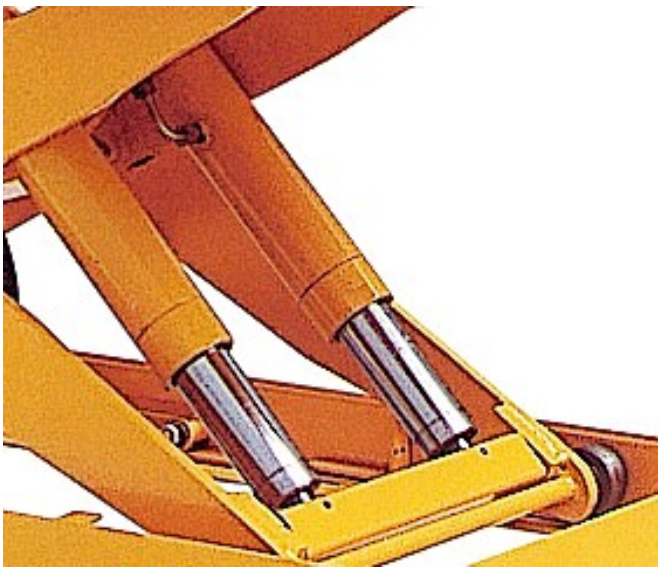

Two hydraulic cylinders with chromed rods

ISO 9001
BUREAU VERITAS Certification

AYERBE INDUSTRIAL DE MOTORES, S.A.

C/Oilamendi 8 -10 01015 VITORIA (SPAIN)
Tel. +(34) 945 292 297 FAX +(34) 945 292 298
E-mail: ayerbe@ayerbe.net www.ayerbe.net